

Orbi Satellite



Orbi Pro
SRK60 (AC3000)
MESH SYSTEM SETUP

Orbi Satellite

Use the yellow port on the Orbi router base and plug it straight into the modem. Use Ethernet cable for the connection.

Give it about 2-3 minutes to boot. Wait for the ring to go solid blue — that means it linked. If it turns amber or magenta and stays there? Check the connection or reset it.

Orbi Satellite Sync

Plug the satellite into power. Wait for the ring light to come on. It'll blink white for a bit while it boots up.

- ▶ Make sure your Orbi router (not the satellite) is fully up and running.
- ▶ Put the satellite near the router — like, same room.
- ▶ Don't try to sync it from across the house. That comes later, after it's synced.
- ▶ On the router, find the sync button. Press it.
- ▶ Then, within 2 minutes, go hit the sync button on the satellite. They need to find each other in that window.
- ▶ The lights will do their thing. Here's what you want:

Orbi Satellite

- ▶ **Blue light:** sweet, they're synced.
- ▶ **Amber:** weak connection. Might still work.
- ▶ **Magenta/purple:** nope. Didn't sync. You're back to square one.

If you get magenta. Just unplug the satellite, plug it back in, and try again.



Orbi App Login and Setup

Go to the App Store or Google Play. Search for Orbi (by NETGEAR) Download it. Open it. It'll ask you to create a NETGEAR account.

Then it'll search for your Orbi. This part can be a little slow. Make sure your phone's Bluetooth and location is on. Once it finds it, you'll set up your WiFi network name and password.

Orbi Satellite

Firmware Updates

The app might tell you there's an update. Hit "update" and just walk away for 10–15 minutes. It looks like nothing's happening, but it is. Don't unplug anything unless you want to start over.

Once the updates are done and all the devices are showing solid lights (or none — they go dark when stable), you're good. Your WiFi should be live.

The screenshot shows a web browser window titled "Firmware Update - Google Chrome" with the address bar displaying "192.168.1.2/fwUpdate.htm". The page header includes the Orbi logo with the tagline "Better WiFi. Everywhere.", the text "Orbi Satellite", and a language dropdown set to "English". The main heading is "Firmware Update", followed by the sub-heading "Upload Update File". Below this, a text prompt reads "Locate and select the update file on your device." A text input field contains the filename "RBS50-V1.2.0.6.img", and a "BROWSE" button is positioned to its right. A blue "UPLOAD" button is centered below the input field. The footer features a search bar labeled "Search Help" and a list of links: "HELP & SUPPORT", "DOCUMENTATION", "ONLINE SUPPORT", "EXTENDER FAQ", and "LICENSE".

Firmware Update - Google Chrome

192.168.1.2/fwUpdate.htm

orbi
Better WiFi. Everywhere.

Orbi Satellite English

Firmware Update

Upload Update File

Locate and select the update file on your device.

RBS50-V1.2.0.6.img BROWSE

UPLOAD

Search Help

HELP & SUPPORT DOCUMENTATION ONLINE SUPPORT EXTENDER FAQ
LICENSE

Orbi Satellite

Thank You



Need Any Help?
Scan the QR code or
Visit: www.orbi-satellite.com



support@orbi-satellite.com



www.orbi-satellite.com